


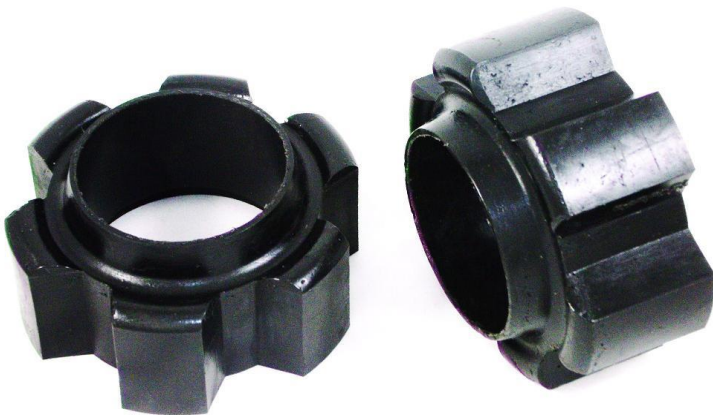

**2007-2018 Jeep Wrangler JK
1.5" Coil Spacer Leveling Kit
Part #1007**

INSTALLATION SHEET

1. Park vehicle on a flat, level and hard surface. Jack up the front end of the vehicle and support the vehicle with jack stands. The front wheels must be off of the ground. Use a floor jack to support the differential.
2. Remove the front tires and wheels.
3. Disconnect the lower sway bar links from the differential.
4. Disconnect the lower shock mounts.
5. Lower the jack supporting the differential slowly to make the coils become loose.
CAUTION: Do not lower the differential too far because it will damage the brake lines.
6. Before removing the springs, mark each coil left or right to reinstall in the same position they were before.
7. Install the PERFORMEX™ coil spacers on the upper mount over the stock isolator.
8. Raise the front or rear differential. Make sure the coil springs are in the correct position.
9. Reconnect the front sway bar links.
10. Reinstall the lower shock mounts.
11. Torque all bolts and nuts to factory specs.
12. Install tires and wheels.
13. It is recommended that the vehicle be aligned after installing this kit.



WARNING

THIS VEHICLE HAS BEEN MODIFIED TO ENHANCE ITS OFFROAD PERFORMANCE. THE HANDLING WILL DEFFER FROM STANDARD PASSENGER CARS AND TRUCKS. DRIVE WITH CARE, REDUCE SPEED AND WEAR SEAT BELTS AT ALL TIMES.

***The spacers included in this kit may not represent the actual lift you will achieve with any Performex™ Leveling or Lift kit. Example: A 2.5" Leveling Kit will have 1.25" inch spacers included. Due to independent suspension design on the vehicles, the lift will be approximately double the size of the actual spacer. For any questions please [Contact Us](#) for additional assistance.**

ATTENTION VALUED CUSTOMER

**For inquiries and replacement of missing parts
please contact Performex™ directly for fast and
convenient shipping direct to you.**

Contact Us:

956-630-5438

customerservice@performexweb.com