


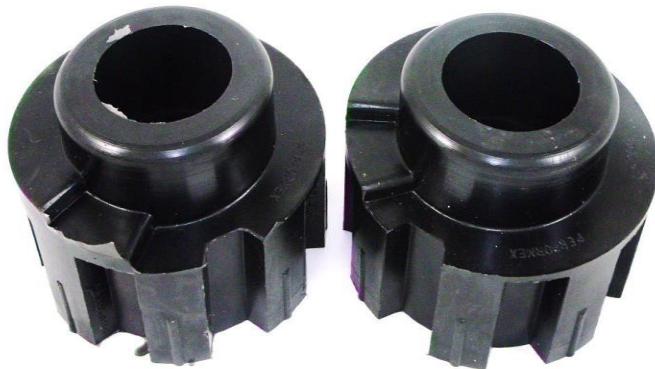

2005-2018 Ford F250/F350/F450 4WD  
1.75" Leveling Kit  
Part #1010

## INSTALLATION SHEET

1. Park vehicle on a flat, level and hard surface Jack up the front end of the vehicle and support the vehicle with jack stands. The front wheels must be off of the ground.
2. Remove the front tires and wheels
3. Raise the axle using the floor jacks enough to relieve the tension in the shocks.
4. Disconnect the end links to the sway bar,
5. Remove the bolt at the brake line bracket to avoid damage when lowering the axle.
6. Remove shocks on both sides.
7. Lower the front axle as far as possible. Mark each spring left or right, and up or down to reinstall later on the same position and orientation. Remove only one spring at a time.
8. Compress the spring down and install the coils spacer and reinstall the spring.
9. Repeat steps 7 and 8 for on the other side of the vehicle.
10. Lift axle back up.
11. Reinstall brake line bracket
12. Reconnect sway bar end links.
13. Torque all nuts and bolts to factory specifications.
14. Put wheels back on and lower vehicle to the ground.
15. It is recommended that the vehicle be aligned after installing this kit.



### WARNING

**THIS VEHICLE HAS BEEN MODIFIED TO ENHANCE ITS OFFROAD PERFORMANCE. THE HANDLING WILL DEFFER FROM STANDARD PASSENGER CARS AND TRUCKS. DRIVE WITH CARE, REDUCE SPEED AND WEAR SEAT BELTS AT ALL TIMES.**

**\*The spacers included in this kit may not represent the actual lift you will achieve with any Performex™ Leveling or Lift kit. Example: A 2.5" Leveling Kit will have 1.25" inch spacers included. Due to independent suspension design on the vehicles, the lift will be approximately double the size of the actual spacer. For any questions please [Contact Us](#) for additional assistance.**

**\*ATTENTION VALUED CUSTOMER\***

**For inquiries and replacement of missing parts please  
contact Performex™ directly for fast and convenient  
shipping direct to you.**

**Contact Us:**

**956-630-5438**

**[customerservice@performexweb.com](mailto:customerservice@performexweb.com)**